



IP Office Essential Edition

Quick Mode T7316 Phone User Guide

Notices

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya.

End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Web site: <http://www.avaya.com/support>. Please note that if you acquired the product from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/](http://support.avaya.com/licenseinfo/) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER, AND AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone products or pre-installed on Hardware. "Hardware" means the standard hardware originally sold by Avaya and ultimately utilized by End User.

License types

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation(s) and Product(s) provided by Avaya. All content on this site, the documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil, offense under the applicable law.

Third Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>.

Preventing toll fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya fraud intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Web site: <http://support.avaya.com>. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

Avaya and Aura are trademarks of Avaya, Inc. The trademarks, logos and service marks ("Marks") displayed in this site, the documentation(s) and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the documentation(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party. Avaya is a registered trademark of Avaya Inc. All non-Avaya trademarks are the property of their respective owners.

Downloading documents

For the most current versions of documentation, see the Avaya Support Web site: <http://www.avaya.com/support>

Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: <http://www.avaya.com/support>

Contents

1. T7316 Telephone

1.1 Which Telephone System?	8
1.2 Programmable Buttons	9
1.3 Dialing Codes	10
1.4 Feature Codes	11
1.5 Status Letters	12

2. Call Handling

2.1 Making Calls	14
2.1.1 Making Internal Calls	14
2.1.2 Making External Calls	14
2.1.3 Setting a Callback	14
2.1.4 Redial	15
2.1.5 Making Page or Direct Calls	15
2.2 Answering Calls	16
2.2.1 Answering a Page Call	16
2.2.2 Call Pickup	16
2.3 Speed Dialing	18
2.3.1 Personal Speed Dials	18
2.3.2 System Speed Dials	18
2.3.3 Auto Dialing	18
2.4 Adjusting the Volume	20
2.5 Mute	20
2.6 Holding Calls	20
2.7 Parking Calls	20
2.8 Transferring Calls	21
2.8.1 Voice Mailbox Transfer	21
2.9 Conferencing Calls	22
2.10 Using Handsfree	23
2.11 Using a Headset	24
2.12 Joining Calls	24

3. Other Features

3.1 Absent Text Messages	26
3.2 Forwarding Calls	26
3.3 Call Coverage	27
3.4 Locking Your Extension	28
3.5 Account Codes	28
3.6 Do Not Disturb	29

4. Using Voicemail

4.1 Accessing Your Mailbox	33
4.2 Listening to Your Messages	34
4.3 Record Your Name	35
4.4 Changing Your Access Code	36
4.5 Changing Your Greeting	37
4.6 Voicemail Coverage On/Off	38
4.7 Forwarding a Message	39
4.8 Calling a Message Sender	39
4.9 Voicemail Email	40
4.10 Outcalling	41

5. Your Call Log

5.1 Accessing the Call Log	44
5.2 Viewing Call Details	45
5.3 Making a Call	46

5.4 Deleting a Record	46
5.5 Deleting All Records	46
5.6 Adding a Record to Your Contacts	46

6. Phone Settings

6.1 Naming Your Extension	48
6.2 Contrast	48
6.3 Ringer Volume	48
6.4 Button Programming	48
Index	51

Chapter 1.

T7316 Telephone

1. T7316 Telephone

This guide covers operation of a T7316 phone on an IP Office Essential Edition - Quick Mode phone system.



1.1 Which Telephone System?

The IP Office telephone system can operate in a number of modes. This guide is for a system operating in IP Office Essential Edition - Quick Mode mode.

To check what system you are one, press Feature 9*80. If your system is a IP Office Essential Edition - Quick Mode system. Instead the display will show the software level the system is using. If you hear an error tone, contact your system administrator to obtain the appropriate T7316 user guide

1.2 Programmable Buttons

Your phone has a number of programmable buttons. You and your system administrator can assign functions to the programmable buttons on your phone. However, you cannot override any Intercom, Call Appearance or Line Appearance buttons already assigned by the system and your system maintainer.

The phone system can also operate in one of two modes; key system mode or PBX system mode. Your system administrator will confirm the mode being used by your system. The mode being used automatically sets the role of some of the programmable buttons on your phone.


Key System Mode

- **Intercom Buttons**
The first two programmable buttons are set as Intercom buttons and cannot be changed. These buttons are used to make and receive internal calls.
- **Line Appearance Buttons**
Some additional buttons are set as line buttons by your system administrator. These buttons are used to make and receive external calls. Your system administrator can adjust the number of line appearance buttons on your phone and which lines they represent.
- **Other Buttons**
Any remaining buttons can be programmed for a range of features. This is done by your system administrator or by yourself through the phone's menus. For more information refer to the Quick Mode Phone Base Administration manual.

PBX System Mode

- **Call Appearance Buttons**
For a system in PBX system mode, the first three programmable buttons are set call appearance buttons. These buttons are used to make and receive internal and external calls.
- **Line Appearance Buttons**
Your system administrator can assign the some buttons as line appearance buttons if required. This allows you to make and answer calls on a specific line if required.
- **Other Buttons**
Any remaining buttons can be programmed for a range of features. This is done by your system administrator or by yourself through the phone's menus. For more information refer to the Quick Mode Phone Base Administration manual.

T7316 Phone Buttons

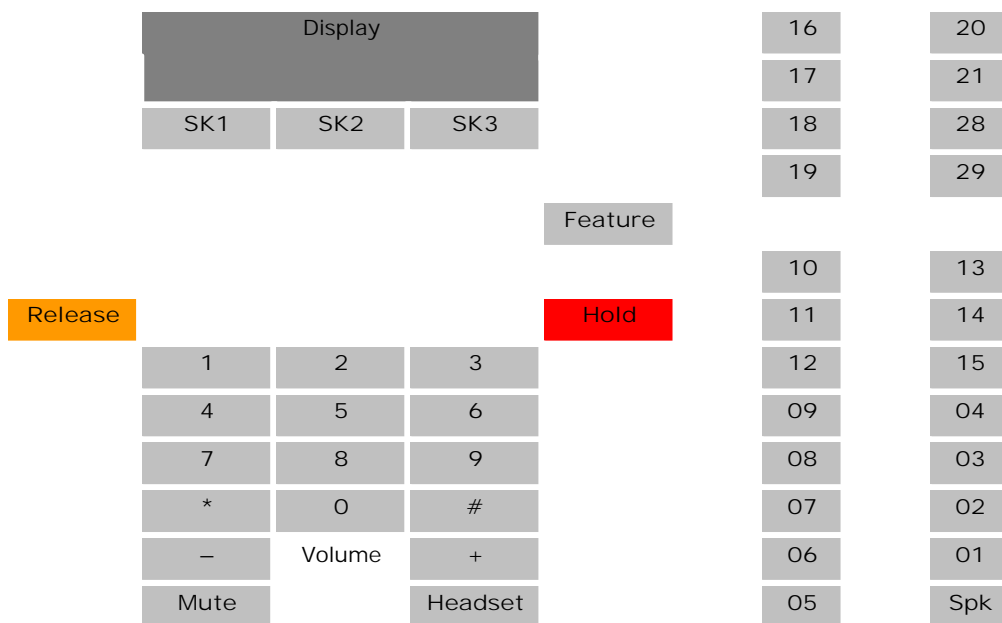

1.3 Dialing Codes

The following features can be used by dialing the appropriate number.

Feature	Dial	Summary
Call Pickup	6 <Extension Number>	Answer the longest waiting call ringing at an extension.
Group Pickup	66 <Pickup Group>	Answer the longest waiting call ringing any extension that is a member of the pickup group (1 to 4) selected.
Idle Line Pickup	8 <Line Number>	Seize the specified line if it is idle and then make a call using that line.
Active Line Pickup	68 <Line Number>	Answer or seize the call on the specified line.
Loudspeaker Paging	70	Page the loudspeaker device attached to the system.
Simultaneous Paging	*70	Page both the loudspeaker device attached to the system and the extensions in calling group 71.
Group Calling – Ring	7 <Calling Group>	Call the available extensions in one of the calling groups (1 to 4). If your system is running in PBX mode, an additional calling group 5 also exists.
Group Calling – Page	*7 <Calling Group>	Page the available extensions in one of the calling groups (1 to 4). If your system is running in PBX mode, an additional calling group 5 also exists.
Group Hunting – Ring	77 <Hunt Group>	Call the available extensions in one of the hunt groups (1 to 6).
Group Hunting – Page	*77 <Hunt Group>	Page the first available extension in one of the hunt groups (1 to 6).

1.4 Feature Codes

The following feature codes can be dialed after pressing  Feature. Many of these features can also be assigned to [programmable buttons](#) ^[48].

- [Account Code Entry](#) ^[28]: *Feature 900*
This function allows you to enter an account code prior to making a call or during a call.
- [Call Forwarding](#) ^[26]: *Feature 4*
This function allows you to redirect all your calls to another number. If the system administrator has configured you for Remote Call Forwarding, you can forward calls externally by specifying a personal speed dial as the destination.
- Caller ID Inspect: *Feature 811*
This function allows you to see the caller ID of a call on another line without interrupting the current call to which you are connected.
- Caller Name Display: *Feature 933*
This function allows you to swap the display of caller ID name and number information on the phone.
- [Call Log](#): ^[44] *Feature 812*
This function allows you to view the phone system's call log of all caller IDs of calls received by the system. To use this you must be one of the three extensions configured for call ID logging by your system administrator.
- Conference: *Feature 3*
Turn the current call and held call into a conference call. The held call can be an existing conference to which you want to add another call.
- [Conference Drop](#) ^[22]: *Feature 934*
This function allows you to select and drop a call from a conference.
- Contact Closure 1: *Feature 9*41*
This function you to operate the system's contact closure 1 connection which might, for example, be connected to a door control. To use this, you must be a member of the system's contact closure group.
- Contact Closure 2: *Feature 9*42*
This function you to operate the system's contact closure 2 connection. To use this, you must be a member of the system's contact closure group.
- [Do Not Disturb](#) ^[29]: *Feature 85*
This function allows you to switch do not disturb on or off.
- [Last Number Redial](#) ^[15]: *Feature 5*
This function allows you to redial the last external number dialed.
- [Personal Speed Dial](#) ^[18]: *Feature *480 to *499*
Dial the selected personal speed dial number.
- [Transfer](#) ^[21]: *Feature 70*
Put your current call on hold and make an transfer enquiry call to the number entered. To complete the transfer dial the code again.
- Recall: *Feature 71*
This function allows you to send a recall or hook flash signal.
- Saved Number Redial: *Feature 67*
This function allows you to save the number dialed during a call and to redial that number when idle. This can be used when the number dialed does not answer.
- Serial Number: *Feature 9*82*
Displays the feature key number of the System SD card. This is the number used for validation of licenses entered into the system configuration.
- [Station Lock](#) ^[28]: *Feature 936*
This function allows you to lock and unlock your extension from being used to make calls. When selected, you are prompted to enter a four digit code after which the extension is locked. If the extension is already locked, use of this function prompts for reentry of the four digit code to unlock the extension.
- [Station Unlock](#) ^[28]: *Feature 937*
This function can only be used by the first two extensions in the system. It allows the user to unlock any extension without needing to know the code that was used to lock that extension.
- System Version: *Feature 9*80*
Displays the core software level that the system is running.
- System IP Address: *Feature 9*81*
Displays the IP address of the systems LAN port.
- [System Speed Dial](#) ^[18]: *Feature 0600 to 0699*
Dial the selected system speed dial.

-
- [VMS Mailbox Transfer](#)^[21]: *Feature 986*

This function allows you to transfer your current call to another extension's mailbox. Your current call is put on hold and you enter the target extension number to indicate the mailbox required.

1.5 Status Letters

When the phone is idle, it normally displays the date, time. It may also shown you extension number and, in the bottom left, some of the following status letters.

- **B = Barred**
A B is shown on your phone's display when the system administrator has set you to outgoing call barred status. You will only be able to make internal calls while this is applied.
- **D = Diverting (Forwarding) Calls**
A D is shown on your phone's idle display when you have forward unconditional enabled.
- **G = Group Member (In Group)**
A G is shown on your phone's idle display when have been configured as a member of a hunt group and your membership is enabled. While this is the case, you may receive calls targeted to the hunt group.
- **N = No Calls (Do Not Disturb)**
An N is shown on your phone's idle display when you have do not disturb enabled.
- **T = Twinned**
A T is shown on the phone's idle display if it is internally twinned with your phone. Calls to you will alert on both phones and can be answered by you at either phone.
- **S = System Alarm**
If you are configured as a system phone, an S in the phone's display indicates a system alarm.





Chapter 2.

Call Handling






2. Call Handling

2.1 Making Calls

2.1.1 Making Internal Calls

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press an idle Intercom or Call Appearance button.
3. Dial the extension number or the code for the feature you wanted to access. If you put a * in front of the extension number, the system will attempt to make a [direct voice call](#) .
4. You will hear the call progress. You can continue the call handsfree or switch to using the handset by lifting it.
 - If the other extension doesn't answer, press AutCB to have the system call you when that extension is next free.

2.1.2 Making External Calls

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press an idle Line Appearance or Call Appearance button.
3. Dial the telephone number.
 - If using a Call Appearance button, some systems may require you to dialing a specific prefix when making external calls. Your system administrator will inform you if a prefix is required.
 - To dial a [personal speed dial](#) , press Feature or # and select the speed dial between 80 and 89.
 - To dial a [system speed dial](#) , press Feature or # and select a speed dial between 600 to 699.
 - To select a number from the directory, press the Dir soft key.
4. You will hear the call progress. You can continue the call handsfree or switch to using the handset by lifting it.

2.1.3 Setting a Callback

If the call is to another internal user, and they do not answer, you can set a callback. When a callback is set, when the other user next uses their phone or ends their current call, the system will call you and when you answer, automatically makes another call to the user.


1. While the call is still ringing or if you hear busy, press the AutCB soft key.
2. End your call attempt.

2.1.4 Redial

Using Last Number Redial

1. Lift the handset.
2. Press Feature 5.

To Create a Last Number Redial Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 5.
 4. The current setting of the button will now be set to Last Number Redial.
- To finish, end the call or press the  Release button.

2.1.5 Making Page or Direct Calls




You can make calls that are automatically answered if the extension or extensions called support auto answer. There are two methods: page calls and direct voice calls, however the method for making both types of call is much the same.

To Make a Direct Voice Call

For a call to an individual extension, putting * in front of the extension number of the user being called makes the call a direct voice call. If supported by the phone being called, the call is automatically answered after the called users hears 3 beeps.


Unlike a page call, the called user can also speak without having to take any further action if their phone has a handsfree microphone. Otherwise they need to pick up the handset to be heard.




If the user called is already on a call when you attempt a direct voice call to them, your call is turned into a normal waiting call.

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Dial * and then the extension number of the user.
 - If the user's phone is idle and supports auto answer, you can speak and be heard by them immediately. You can also hear them.
 - If you hear ringing, then either the user called already has another call in progress or has a phone that does not support answer.

To Make a Page Call

For a call to a group of extensions, putting a * in front of the extension number of the group being called makes the call a page call. The group type is ignored, instead, all users who are members of the group, have phones that support auto answer and are currently not on another call, hear a single beep and can then hear you. However, you cannot hear the group members.

One of the users being paged can [answer the page](#)  if they want to. That turns the page call into a normal call between just you and the answering user.



2. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Dial * and then the extension number of the group.

To Page the Loudspeaker Device

The telephone system can include a connection to a loudspeaker paging device. To page this device make a normal internal call to the extension number 70. If you make an internal call to *70, you will page both the loudspeaker device and the available users in the calling group 71.

2.2 Answering Calls

You can answer telephone calls that are ringing your extension or at another extension. If you regularly pick up calls for a specific extension you can program a [call pickup](#) ^[48] button for that specified extension.

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#) ^[20] (by pressing  Hold).
2. While the call is alerting, additional soft key options may be displayed:
 - To VM
This option sends the ringing call to voicemail to leave a message in your mailbox.
 - Ignore
This option does not affect the incoming calls but temporarily turns off the ringer.
3. If you pick up the handset you are connected to the incoming call. To answer a call alerting on a specific line, press that button.

2.2.1 Answering a Page Call

There are two type of calls which your phone will automatically answer the call so that you automatically hear the caller. This will only happen if your phone is currently idle, ie. not on another call.

Three Beeps

A call connected automatically after [three beeps](#) is a direct voice call to your extension only. The call is connected and answered automatically. You can speak to the caller without taking any further action.



Single Beep

A call connected automatically after [a single beep](#) is a page call a group of which your phone is a member. You can hear the caller but they cannot hear you.


To answer the call, turning it into a normal call between just you and the caller, press Feature 3 or press the Answer soft key.

2.2.2 Call Pickup

If you hear another phone ringing, there are a number of ways that you can answer the call if you know the user, group or line being called.

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#) ^[20] (by pressing  Hold).
2. Press an idle Intercom or Call Appearance button.
 - To pickup a call ringing at a particular extension:
Dial 6 followed by the extension number at which the call is ringing or parked.
 - To pickup the longest waiting call in a pickup group:
Dial 66 followed by the pickup group number (1 to 4).
 - To pickup the call ringing on a particular line:
Dial 68 followed by the two digit line number.
3. You can continue the call handsfree or switch to using the handset by lifting it.

To Create a Call Pickup Button

1. At the phone press Feature *3. Program Ext: is displayed.
2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
3. Press the first intercom or call appearance button.
4. Dial 6 followed by the target extension number.
5. The button function is changed to Call Pickup followed by the target extension number.
 - To finish, end the call or press the  Release button.

To Use a Call Pickup Button

1. Press the Call Pickup programmed button for the specified extension number. You are connected to the call that was ringing the specified extension.

2.3 Speed Dialing

There are a number of ways that you can dial a stored number.


2.3.1 Personal Speed Dials

You can create up to 20 personal speed dial codes, 80 to 99, to store frequently dialed numbers. The numbers can be quickly dialed by pressing Feature and the two-digit code for that personal speed dial.

The personal speed dial numbers programmed for a particular extension can only be used at that extension.

- If the system is connected to a PBX or Centrex system and a dial-out code (usually 9) is needed to place calls outside the PBX or Centrex system, include the dial-out code in Speed Dial numbers that must dial out of the PBX or Centrex system.
- Personal speed dials do not override any dialing restrictions that apply to an extension.

To Use a Personal Speed Dial


1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press Feature *4 or # and dial the two digit personal speed dial code between 80 and 99.
3. The stored number is dialed.

To Edit Your Personal Speed Dials

You can use edit your personal speed dials.

1. At the phone press Feature *3.
2. Program Ext: is shown on the display.
4. Press Feature, *4 and the speed dial number to be programmed between 80 and 99.
5. The current setting of the speed dial entry is displayed.
6. Enter the external number. The number can be up to 28 characters in length. The following keys can be used to enter special dialing commands:

Function	Press to insert	Character	Description
Pause	HOLD	P	Inserts a 1.5 second pause.
Transfer	SPEAKER	R	Send a hook-switch flash signal.
Stop	CONFERENCE	S	Stop dialing.




7. To remove the existing number press MIC/HFAI.
- To finish, end the call or press the  Release button.

2.3.2 System Speed Dials

The system administrator can program up to 100 frequently used number as system speed dial numbers 600 to 699. Any user in the system can use a system speed dial by pressing Feature and dialing the three digit code of the system speed dial required.

- Except in special cases which the system administrator can configure, system speed dials do not override any dialing restrictions that apply to an extension.
- Phone users can also view and use system speed dials through the phone's Dir soft key menu.

To Use a System Speed Dial

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press Feature 0 and then dial three digit system speed dial code between 600 and 699. Alternatively dial # and then the dial three digit system speed dial code.
3. The stored number is dialed.

2.3.3 Auto Dialing

An auto dialing button is used to store a frequently used or important number. Whenever the number needs to be dialed, pressing the button will dial the stored number.


To Use an Auto Dial Button

1. At dial tone or whenever you want to dial a number, press the programmed auto dial button.
2. The stored number is dialed.

To Create an Auto Dial - Other Button



1. At the phone press Feature *3. Program Ext: is displayed.
2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
3. To create an auto dial button to store an extension number press your first Intercom or Call Appearance button. For a button to store any other type of number press your second Intercom or Call Appearance button.
4. Enter the number for calls made using the button. An external number can include * and # and the following special characters:

Function	Press to insert	Character	Description
Pause	HOLD	P	Inserts a 1.5 second pause.
Transfer	SPEAKER	R	Send a hook-switch flash signal.
Stop	CONFERENCE	S	Stop dialing.

5. The current setting of the button will now be AD-I (auto dial intercom) or AD-O (auto dial other) followed by the stored number.
- To finish, end the call or press the  Release button.


2.4 Adjusting the Volume

While the phone is connected to a call you can adjust the volume. The volume that gets adjusted will depend on whether you are using the handset or speakerphone at the time you use this process.

1. With the call connected, press the  and  minus keys to adjust the volume.

2.5 Mute



While on a call, you can temporarily turn off the microphone so that the caller cannot hear you. You however will still be able to hear the caller.

1. To activate mute, press the  MUTE key. The button will be lit while mute is active.
2. To switch mute off, press the key again.





2.6 Holding Calls

When you put a call on hold, you can make and receive other calls. However, if a call is left on hold for too long, by default 15 seconds, it will automatically alert your phone again if you are not on another call.

To Put a Call on Hold


1. During the call, either press the  HOLD button or press the button on which the call is taking place. The indicator next to the button will change to fast flashing  icon to show there is a call on hold.

To Return to a Call Put on Hold


1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press the button next to the fast flashing icon. You are connected to the call. The icon changes to a steady  icon.

2.7 Parking Calls

Use this feature to place a call on a special type of hold where it can be retrieved from any extension in the system.

- You should park only one call at a time to ensure that you know which caller you are talking to when you retrieve the parked call.
- If you frequently park calls, program your extension number on an [Auto Dial](#)  button, so you can park a call simply by pressing that button during the park process.

To Park a Call

1. While on a call, press Feature 70 and dial your own extension number.
2. Replace the handset or press  Release. If the call is not picked up within three minutes, it rings back at your extension.

To Retrieve a Parked Call

1. Press an Intercom or Call Appearance button and then 6 followed by the extension number of the extension that parked the call.

2.8 Transferring Calls

You can transfer a call to another extension.

1. During the call, press Feature 70. The call is put on hold.
2. Make a call to the transfer destination. Then do one of the following:
 - To transfer the call without announcing it (an unsupervised or blind transfer) hang up or dial Feature 70 again. You can do this as soon as you hear ringing. The transfer is complete. If the call is not answered it will be returned to your extension. When your extension rings, lift the handset to be reconnected to the caller.
 - To announce the call before completing the transfer (a supervised transfer), wait for the call to be answered. If the called party is willing to accept the call hang up or dial Feature 70 again. If no one answers or the call is refused, press the button next to the fast flashing button to be reconnected to the original caller.

2.8.1 Voice Mailbox Transfer


You can transfer a caller to directly to an extension's voice mailbox for the caller to leave a message without first ringing the extension. This feature is useful when you know that the extension user is not present and has not set do not disturb.

You can program a voice mailbox transfer button to transfer a caller directly to a voice mailbox by pressing the button and then dialing the mailbox subscriber's extension number.

To Transfer a Caller Direct to a Mailbox

1. During the call press Feature 14.
2. Dial the two digit extension number of the extension for which the caller wants to leave a message. The caller is routed to the mailbox and hears the recorded greeting for that mailbox.
3. Hang up.

To Create a Voice Mailbox Transfer Button

1. At the phone press Feature *3. Program Ext: is displayed.
2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
3. Dial Feature 986. The current setting of the button will now be set to Voice Mailbox Transfer.
 - To finish, end the call or press the  Release button.

2.9 Conferencing Calls


The conference feature allows you to conference other parties (including yourself) into a call. The system supports multiple conferences of up to 64 parties in total, including up to 2 external analog trunk in each conference.

To Create a Conference Call

1. While active on a call, press Feature 3. The first party is now on hold.
2. When you hear dial tone, dial the telephone number of the second party.
3. When the call is answered press Feature 3 again to add the second party to the call. All parties hear a single beep to indicate that they are in a conference call.
4. You can now speak to the first and second parties.
5. Repeat the steps above to add more parties.

To Hold a Conference Call



If you need to answer or make another call during a conference, you can [hold](#) ²⁰ in the same way as for normal calls. When you put a conference call on hold, the other parties can still talk to each other.

- **! WARNING**
Only hold a conference that you know is taking place on your own telephone system. If you hold a conference that you have joined on another telephone system, that conference will hear hold music.
1. Press the  HOLD button. The button icon will change to a fast flash.
 2. To re-join the conference call, press the button.

To Drop Yourself

1. Press  Release twice.

To Drop Other Parties

1. Press  Release or press the Detail soft key.
2. The details of the parties in the conference are displayed. Your own details are always displayed first.
3. Press * or the Next soft key to cycle through the details of the conference parties.
4. When the party you want to drop is displayed # (or press  Release).
5. Wait a few seconds for the display to return to normal or press Exit soft key.

2.10 Using Handsfree

Your phone has a handsfree speaker and microphone. These allow you to make and answer calls handsfree.

- You can make a handsfree call by simply dialing without lifting the handset. You can hear the call progress and when answered, either continue handsfree or lift the handset.
- The speaker allows the phone to receive page calls. You can hear the page without needing to take any action. You can answer the page by pressing the Answer soft key.
- The speaker allows the phone to auto answer direct voice calls. You can hear the caller and they can hear you without you needing to take any action. The same applies for call from other users if you have internal auto-answer set on the phone.
 - Pressing the Handsfree button answers a call handsfree.
 - The key can also be pressed to turn a call already answered using the handset or headset into a handsfree call.
 - If there are no currently connected calls to which you are talking, a call answered by pressing its appearance button is connected as handsfree.
 - If you are not currently connected to a call:
 - If the handset is off-hook, answering a call by pressing the alerting appearance button answers the call using the handset.
 - If the handset is on-hook, answering a call by pressing the alerting appearance button answers the call using the speaker or headset if one is connected, depending on which of the two modes was last used on a call.
 - If there is already a connected call to which you are talking handsfree, answering another call by pressing the appearance button will answer that call handsfree.

Note

Room acoustics and background noise can affect the proper operation of the speakerphone. To ensure that your speakerphone works effectively, follow these guidelines:

- Avoid placing your telephone in areas with high background noise caused by sources such as motor vehicles, manufacturing equipment, loud voices, radios, printers, copiers, typewriters, other noisy office equipment or heater and air conditioning fans.
- Avoid talking before the other person is finished speaking. When you both talk at the same time, only one person's voice comes through.
- Do not use your speaker to make announcements over a loudspeaker paging system connected to your telephone system.
- When talking, always face your telephone and stay within two feet of it.
- Place your telephone at least six inches (15 cm) away from the edge of your desk.
- If you have difficulty hearing the other party, try increasing the speaker volume. If you have background noise, try turning off the microphone when the party at the other end is speaking and turning it on when you speak. If the difficulty persists, lift your handset to continue the conversation.
- In conference rooms, a separate speakerphone is recommended, since the built-in speaker on a system telephone is designed for individual use.

2.11 Using a Headset

Your phone has a headset socket located under the phone.



- Pressing the HEADSET key answers a call using the headset.
- The key is lit when there is a call connected through the headset.
- The key can also be pressed to turn a call already answered using the handset or handsfree into a headset call.
- If you are not currently connected to a call:
 - If the handset is off-hook, answering a call by pressing the alerting appearance button answers the call using the handset.
 - If the handset is on-hook, answering a call by pressing the alerting appearance button answers the call using the speaker or headset if one is connected, depending on which of the two modes was last used on a call.
- If there is already a connected call to which you are talking through the headset, answering another call by pressing the appearance button will answer that call using the headset.




2.12 Joining Calls

Joining is adding yourself to a call in progress.

- You cannot:
 - Join an internal call or a conference call at another extension.
 - Join a call at any extension where the extension user has privacy enabled.
 - Put a joined call on hold.
- You can:
 - Tell when someone has joined your call when you hear a single beep.
 - Use privacy to allow or prevent others from joining your calls.
 - Join a call that is being answered by the voice messaging system. When you join the call, the voice messaging system disconnects automatically so you can speak to the caller.
 - Dial 68 <Line Number> to join a call on that line if a line is not assigned to a button on your extension.

To Join a Call

A steady icon next to a line button indicates that a call is in progress on that line.

1. If already on a call, end the call (by pressing  Release) or put it [on hold](#)  (by pressing  Hold).
2. Press an Intercom or Call Appearance button and dial 68 followed by the two-digit line number. Alternatively, if you have a button for that line, press the line button and lift the handset.
3. You are now joined with the call. All parties on the call hear a single beep.

Chapter 3.

Other Features


3. Other Features

3.1 Absent Text Messages

The absent text message feature assists internal callers by displaying a message on their telephone. When another extension calls your extension, your active absent text message appears on the caller's display.

To set and clear an absent text message you need to assign the feature to a programmable button with lights. The button can then be used to activate, select and deactivate the message.

To Create an Absent Message Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 931. The current setting of the button will now be set to Absent Message.
- To finish, end the call or press the  Release button.

To Activate an Absent Text Message

1. Press the absent text message button. The first absent text message is displayed.
2. Scroll through the default messages by pressing the button beneath the word Next until the required message is displayed.

<ul style="list-style-type: none">• Back soon• Don't disturb• Out to lunch• Away from desk	<ul style="list-style-type: none">• Please Call• At lunch• Don't disturb until• With cust	<ul style="list-style-type: none">• Back tomorrow• On Vacation• At home• Be right back	<ul style="list-style-type: none">• On Holiday• Meeting• With visitors
---	--	---	--

3. Press the button beneath the word Activ to select the message shown on the display.
4. To add additional text or edit the existing text, press More and then Edit.
5. To complete the process press the absent text message button again.


To Deactivate the Absent Text Message

1. Press the absent text message button.
2. Press the button beneath the word Dactiv.
3. To complete the process press the absent text message button again.


3.2 Forwarding Calls

All external, internal and transferred calls directed to your extension can be diverted to a different internal extension number. You can enter the destination extension telephone number and select when calls are redirected using a programmed button.


Before you can automatically forward calls you need to assign the feature to a button with lights. The button can then be used to turn call forwarding on and off as required.

- Selected users may also be able to do remote call forwarding where they forward their calls to an external number. If that is the case, consult your system administrator, you can use your [personal speed dials](#)  as the forwarding destination.
- Some users may also be able to use cell phone connect, again consult your system administrator. With cell phone connect the call will ring at both your extension and at the remote call forwarding destination. This is also called mobile twinning.
- You receive a slow interrupted intercom dialling tone when call forwarding is active.


To Manually Set Forwarding

1. Press Feature 4.
 2. Enter the number to which you want to forward calls.
- To finish, end the call or press the  Release button.

To Manually Cancel Forwarding

1. Press Feature #4.
 - Alternatively, use the same process as setting a forward and enter you own extension number as the destination.
- To finish, end the call or press the  Release button.

To Create a Call Forwarding Button


1. At the phone press Feature *3. Program Ext: is displayed.
2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
3. Dial Feature 11.
4. At the Fwd Orig: prompt enter the extension number for which the button is being programmed.
5. At the Fwd Dest: prompt enter the destination extension number for the call coverage calls.
 - To forward to an external number, enter the personal speed dial (80 to 99) that contains the required external number.
 - To forward using cell phone connect/mobile twinning, enter * followed by the personal speed dial (80 to 99) that contains the required external number.
6. The current setting of the button will now be set to Fwd O *<covered extension>* D *<destination extension>*.
 - To finish, end the call or press the  Release button.

3.3 Call Coverage

Call coverage is used to redirect all intercom, transferred, DID and outside calls on lines assigned to you to another extension. When call coverage is in use, covered calls are routed to the covering extension after a specified number of rings set by the system administrator.

- Group calls, forwarded calls, transfer-return calls and calls to doorphone alert extensions are not covered.
- A single extension can cover multiple extensions, however an extension can have only one covering extension.
- If you activate call coverage at your extension, for calls on a line appearance button, you still can intercept a call rerouted to coverage by pressing the button.
- You can program call coverage on a programmable button. Use a button with lights if you want a visual indication when your calls are being covered. When the button indicator is on, your calls are being covered; when off, call coverage is not active.
- If both call coverage and do not disturb are on, covered calls go immediately to the covering extension without ringing the covered extension. Similarly, if call coverage is on and a call begins to ring, you can turn on [Do Not Disturb](#) ²⁹ to send that call immediately for coverage.
- If an extension has call coverage and [VMS Cover](#) ³⁸ active, calls ring at the covering extension.
 - If the covering extension does not answer, the call is routed to the voice mailbox of the covered extension after the specified number of VMS Cover Rings. If the covering extension has [Do Not Disturb](#) ²⁹ active, the call is routed immediately to voicemail.
- If an extension has call coverage active without voice mail coverage, covered calls ring at the covering extension for the specified number of call coverage rings. Outside and intercom calls continue to ring at the covering extension until the call is answered or the caller hangs up.
- For transferred calls, if the covering extension does not answer, the call goes to the transfer return extension after the specified number of Transfer Return Rings (if VMS cover is not active).
- Call forwarding override call coverage. If an extension has call coverage and call forwarding active, calls are routed to the call forwarding destination extension.

To Enable Call Coverage


1. Press Feature 932. Dial the extension number of the covering extension.
 - To finish, end the call or press the  Release button.

To Remove Call Coverage

1. Press Feature 932. Dial your own extension number.

-
- To finish, end the call or press the  Release button.

To Create a Call Coverage Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 4. Dial Feature 932.
 5. At the Coverage Orig: prompt enter the extension number for which the button is being programmed.
 6. At the Coverage Dest: prompt enter the destination extension number for the call coverage calls.
 7. The current setting of the button will now be set to Coverage O *<covered extension>* D *<destination extension>*.
- To finish, end the call or press the  Release button.

To Use a Call Coverage Button

1. Press the programmed button. When on, if programmed on a button with a indicator, the icon will be on.

3.4 Locking Your Extension

You can use the lock feature to prevent unauthorized people from making outside calls from your extension while you are away from the extension. The user of the first extension on the system can unlock extensions without needing to know the code used to lock the phone. They can do this using Feature 22.


To Lock Your Extension

1. Press Feature 936.
2. Dial a four digit code using the 0 to 9 numbers .
3. Redial the four digit code.

To Unlock Your Extension

1. Press Feature 936.
2. Dial the four digit code you used to lock the extension.

To Create a Station Lock Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 936. The current setting of the button will now be set to Station Lock.
- To finish, end the call or press the  Release button.


3.5 Account Codes

An account code is typically used to identify a department, project, or client for charge-back or tracking purposes. An account code can be either forced or optional. When an extension is set up with the forced account code feature, the user must enter an account code before they can dial outside calls

To Manually Enter an Account Code

1. After lifting the handset (or while already active on an outside call), press Feature and dial 900.
2. Enter an account code by dialing the account code using the telephone's dial pad.
3. Press # or press the Done soft key.
4. Continue with the call.

To Create an Account Code Entry Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 900. The current setting of the button will now be set to Account Code Entry.
- To finish, end the call or press the  Release button.

To Use an Account Code Button

1. After lifting the handset or while already active on an outside call, press the Account Code Entry button.
2. Enter an account code using the telephone's dial pad. Press the Account Code Entry button again or press # or press the Done soft key.
3. Continue with the call.

3.6 Do Not Disturb


Use this feature to be able to press a programmed button to prevent incoming calls for the extension from ringing (lights may still flash). You can still use the extension to make calls and to answer calls using line appearance buttons.

- You need to program a button with lights. When the Do Not Disturb feature is on, the light is also on, indicating that the telephone will not ring.
- Use Do Not Disturb when you do not want the auto attendant or the voice messaging system to transfer calls to you.
- Use Do Not Disturb if you are assigned to a Hunt Group and you leave your desk, so calls to the Hunt Group will skip your extension and ring immediately at the next available extension in the group.
- To avoid missing calls when Do Not Disturb is not needed, turn it off.
- Unanswered calls that are transferred from an extension with Do Not Disturb active, ring at that extension if they transfer return.
- Users with [VMS Cover](#) ^[38] turned on can activate Do Not Disturb to send all calls immediately to their voice mailbox.
- Users with [Call Coverage](#) ^[27] turned on can activate Do Not Disturb to send all calls immediately to the covering extension.
- You receive a slow interrupted intercom dialling tone when Do Not Disturb is active.

To Manually Switch Do Not Disturb On/Off

1. Dial Feature 85.

To Create a Do Not Disturb Button


1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 85. The current setting of the button will now be set to Do Not Disturb.
- To finish, end the call or press the  Release button.

To Add Do Not Disturb Exceptions

You can create a set of up to 20 numbers, calls from which are able to still ring you even when you have do not disturb switched on.

3. At the phone press Feature *3. Program Ext: is displayed.
4. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
3. Press Feature and dial 0700 to 0719.
 - The number used above is not a fixed reference. For example, if the exception number set using 702 is cleared, any numbers set as 703 and above are move to 702 and above.

4. The current number is shown if any.

- To enter a number using the normal dialing keys.
- To enter a single digit wildcard, press the left-hand display soft key. The wildcard is shown as an *X*.
- To enter a multiple digit wildcard, press the middle display soft key. The wildcard is shown as an *N*.
- To finish, end the call or press the  Release button.

Chapter 4.

Using Voicemail

4. Using Voicemail

Each extension on the system has a voicemail mailbox by default. The message lamp on your phone is lit when you have new messages in your mailbox.

Except for special cases, for example the extensions connected to the fax machine and loudspeaker, the mailboxes are used when the extension has calls it does not answer within a set time (by default 15 seconds though this can be adjusted for each extension by the system administrator).

In addition to [accessing your mailbox](#)^[33] and [listening to your messages](#)^[34], you can perform a range of other actions:


- [Record Your Name](#)^[35]
You can replace the extension number played to callers with a recording of your name.
- [Set an Access Code](#)^[36]
You can set an access code that must be entered whenever you try to access your mailbox.
- [Record a Greeting](#)^[37]
You can replace the default greeting asking a caller to your mailbox to leave a message with your own recorded greeting.
- [Switch Voicemail Cover On/Off](#)^[38]
You can select whether voicemail should be used to cover calls ringing at your extension.
- [Forward a Message](#)^[39]
You can forward a message to another extension or extensions. You can also add your own comments to the message.
- [Call a Message Sender](#)^[39]
If the message includes the caller ID, you can initiate a call back to the message sender.
- [Voicemail Email](#)^[40]
You can use email to receive notification of a new voicemail message.

4.1 Accessing Your Mailbox

Your system administrator can also configure other methods of access including access to your mailbox from other phones.

Accessing Your Mailbox

1. Press an idle intercom or call appearance button and dial 777.
 - To access your mailbox from another extension, dial 778 and enter your own extension number when asked which mailbox you want to access.
2. If your mailbox has an [access code](#) ³⁶ set, you will be prompted to enter it. Enter your access code.
3. You will hear a prompt telling you how many messages you have. If you have any new messages the voicemail system will start playing your new messages.
4. You can use the controls indicated below to manage your mailbox and messages.

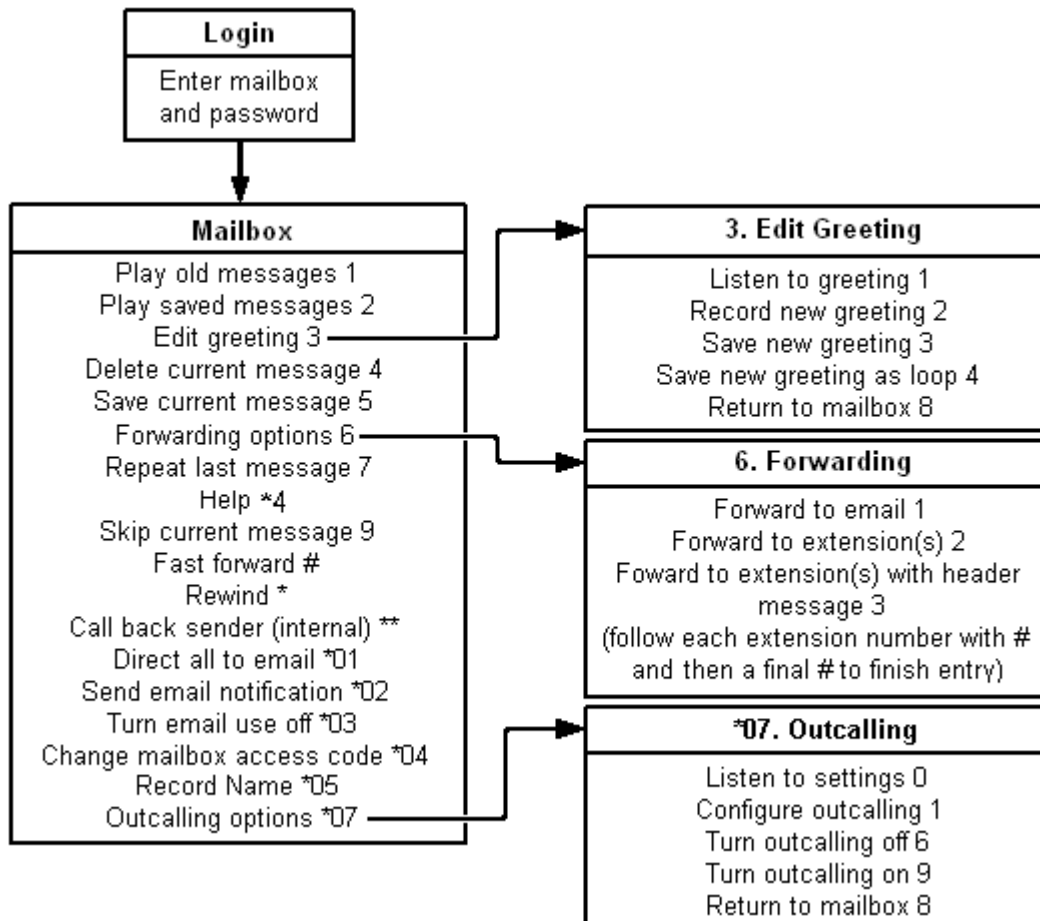


IMPORTANT

Once a new message has been listened to, it is marked as 'old' and is automatically deleted after 24 hours. If you do not want the message deleted, you must mark it as 'saved' by pressing 5 while listening to the message.

4.2 Listening to Your Messages

When you log in to your mailbox you are automatically played any new messages. After a message has been played it is marked as being an old message. Old messages are automatically deleted after 24 hours unless you mark the message as saved.

Whether listening to new, old or saved messages, the messages are played back in order of oldest first.

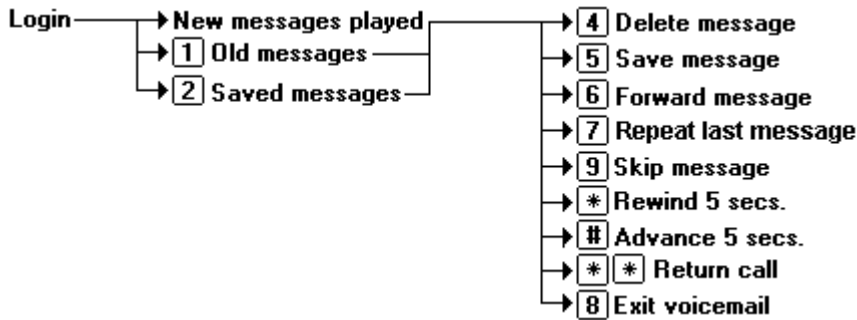

When you listen to any of your messages you have the following options:

- Press 4 to delete the message.
- Press 5 to save the message.
- Press 6 to forward the message. See [Forwarding a Message](#)^[39].
- Press 7 to repeat the last message.
- Press 8 to exit voicemail.
- Press 9 to skip to the next message.
- Press * to rewind the message a few seconds.
- Press # to advance the message a few seconds.
- Press ** to return the call. See [Replying to Messages](#)^[39].

To Listen to Old Messages

1. [Login](#)^[33] to your mailbox.
2. Press 1 to listen to your old messages.

To Mark a Message as Saved

Once you have played a message it is marked as old. Old messages are automatically deleted after 24 hours. To stop this happening to the current message, you can mark it as being a saved message.

1. Press 5 when listening to a new or old message.

To Listen to Saved Messages

1. [Login](#)^[33] to your mailbox.
2. Press 2 to listen to your saved messages.


To Mark a Message as New

While listening to old or saved messages you can reset the message back to being treated as a new message. This will cause the message waiting indicator on the phone to be lit again. Note however that if you are using voicemail email it will not send a new message email.

1. Press *06 while listening to the old or saved message.

4.3 Record Your Name

You can record your name if required. Your name recording is then used for various features such as telling callers which mailbox they have reached rather than just stating the extension number.




To Record or Change Your Name

1. [Login](#) to your mailbox.
2. Press *05 to select the option to record your name.
3. Press 1 to hear your current name recording.
4. Press 2 to record your name. .
5. When you are prompted speak your name. The maximum length that can be recorded is 5 seconds.
6. Press 2 when you have finished recording your name.
7. Press 1 to listen to your new name recording. After you have listened you can:
 - Press 3 to save the new recording.
 - Press 2 to record the new name again.

4.4 Changing Your Access Code

You can set an access code for your mailbox. If you set an access code, it will be requested whenever you access the mailbox to collect messages. When changing your access code:

- Enter at least four digits. If you enter less than four digits you will be prompted to enter a longer code.
- Do not set an obvious code, for example:
 - Do not match your extension number.
 - Do not use a sequence of digits, for example 1234.
 - Do not use the same repeated digit, for example 1111.
- If you forget your access code, your system administrator can clear it.



To Change Your Access Code

1. [Login](#) ³⁴ to your mailbox.
2. Press *04 to change your access code.
3. Enter your current access code and press #. If you have no current access code just press #.
4. Enter your new access code followed by #. The access code must be between 4 and 15 digits in length.
5. Re-enter your new access code followed by #. The access code will now be changed.
 - The system will prompt you if the codes do not match or is not acceptable. It will also confirm the change of access code if successful.


To Remove Your Access Code

1. Log in to your mailbox.
2. Press *04 to change your access code.
3. Enter your current access code and press #.
4. When you are asked to enter your new access code, press #.
5. When you are asked to re-enter your access code, press #. Your access code will have been removed.

4.5 Changing Your Greeting

By default the system plays a general greeting to callers who are directed to your mailbox. That general greeting states your extension number, or name if you have [recorded one](#) ^[35], and asks the caller to leave a message after the tone. You can override the default greeting by recording your own personal greeting.

Callers can skip your greeting by pressing 1. Instead they will hear the tone and can leave their message immediately. This does not work if your greeting is set to play as a continuous loop.

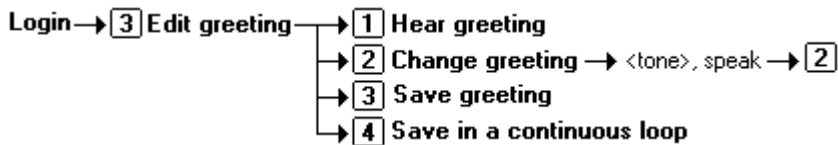

To Listen to Your Greeting

1. [Login](#) ^[33] to your mailbox.
2. Press 3 to select the option to edit your greeting.
3. Press 1 to hear your greeting. If no greeting has been recorded you will hear *"The message has not yet been recorded"*. You need to record a message.

To Record or Change Your Greeting


1. [Login](#) ^[33] to your mailbox.
2. Press 3 to select the option to edit your greeting.
3. Press 2 to change your greeting.
4. When you are prompted speak your new greeting.
 - The greeting must be longer than 3 seconds.
 - A long (approximately 10 seconds) period of silence will disconnect you from voicemail.
5. Press 2 when you have finished recording your greeting.
6. Press 1 to listen to your new greeting. After you have listened to your greeting you can:
 - Press 3 to save the new greeting. Your new greeting will be used.
 - Press 2 to re-record the new greeting.
 - Press 4 to save the new greeting for playing on a continuous loop. This option can be used to continually play the greeting to a caller; the caller will not be able to leave a message. Note that once this option is selected, the greeting cannot be changed back to a normal greeting except by recording a new greeting.

4.6 Voicemail Coverage On/Off

Calls to your extension be rerouted to your voicemail mailbox if you do not answer the call within a set number of rings, the default being 3 rings. This is called VMS Cover. The number of rings used for your extension is set by your system administrator.


- If an extension has [Call Coverage](#) ^[27] and VMS Cover active, a covered calls ring at the covered extension for the specified number of Call Coverage Rings. It will then start ringing the covering extension. If the covering extension does not answer, the call is routed to the voice mailbox of the extension that activated Call Coverage after the specified number of VMS Cover Rings. The count of VMS cover rings starts when the covered extension initially begins to ring. If the covering extension has [Do Not Disturb](#) ^[29] active, the call is routed immediately to the voice mailbox of the extension that activated Call Coverage.
- Users with VMS Cover turned on can activate [Do Not Disturb](#) ^[29] to send ringing calls immediately to their voice mailbox.
- Note that when your voicemail cover is off, you can still access the messages in your mailbox and other users can still use [forwarding](#) ^[39] to send messages to your mailbox.

To Create a VMS Cover Button

1. At the phone press Feature *3. Program Ext: is displayed.
 2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 3. Dial Feature 984. The current setting of the button will now be set to VMS Cover.
- To finish, end the call or press the  Release button.

4.7 Forwarding a Message

You can forward a message to a different mailbox or to several mailboxes at the same time. When you forward a message you can record your own comment to the start of the message.

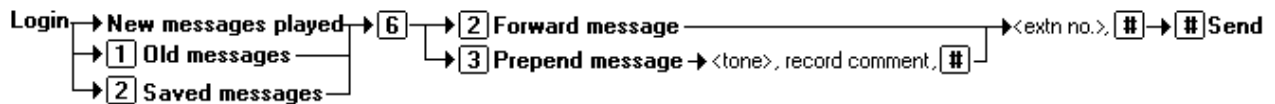

To Forward a Message

- When you are listening to a message, press 6.
 - To forward the message without adding a comment press 2.
 - To forward the message after adding a comment at the start press 3. Record your comment after the tone. Record your comment and press # to finish recording.
- Enter the extension number to which you want to forward the message and press #.
 - If you want to send the message to more than one mailbox enter each mailbox extension number separated by a #.
- Press # to finish addressing and forward the message.

4.8 Calling a Message Sender

You can call the person who left a message in your mailbox. Both internal and external callers can be called back. For external callers, you can only reply if their caller ID was available when the message was left.



To Call the Message Sender

- While you listen to a message, press **. If a caller ID was received when the message was left, a call will be placed to that number.

4.9 Voicemail Email

You can have notification of new messages sent to your email address. The notification can be a simple alert to tell you that you have a message or a copy of the voicemail message if required.

In order to use this feature your system administrator must configure your phone system to use email and enter your email address into the system configuration. If this has not been done you will hear *'Email is not enabled on this mailbox'* whenever you try to use an email option.



To Switch on Email Notification

You can set up your mailbox so that any messages received in future are forwarded to your email address. The messages are not stored in your voicemail mailbox.

1. [Login](#) to your mailbox.
2. Select the required type of email notification.
 - For a email alert press *02.
 - To have the message forwarded to your email, press *01.

To Forward a Message to Email

If you are listening to a message you can send the message to your email either whilst listening to it or immediately after it has been played.

1. During or immediately after playing a message, press 6.
2. Press 1. The message is forwarded to your email address.

To Switch Off Email Notification

If you have chosen any of the email notification options, you can switch them off from your telephone.

1. Log into your mailbox.
2. Press *03. You hear a confirmation message to tell you that the option is now turned off.

4.10 Outcalling

You can have the voicemail system call a number that you have set whenever you receive a new message. Embedded voicemail outcalling only supports a single destination number with no escalation and no time profiles.

- | | |
|----------------|--|
| *07 Outcalling | → 0 Listen to settings |
| | → 1 Set destination number and timeout |
| | → 6 Switch outcalling off |
| | → 9 Switch outcalling on |

Each outcalling call alert will ring for a duration that you can set, the default is 15 seconds. If the call is not answered, it will end the call. If the outcalling call is answered, you will be prompted to enter your [mailbox access code](#)³³. If you don't have an access code set, it will ask for your extension number instead. The outcalling call is ended if:

- You press *# to indicate that you do not want any more outcalling calls for the current new messages.
- You enter the wrong access code 3 times.
- More than 5 minutes passes with no response.

Up to 4 outcalling calls are attempted, with a minimum of 15 minutes between calls, unless you answer and press *# or access your mailbox by another method. If you receive any more new messages in the meantime they do not restart the outcalling attempts.

To Set Your Outcalling Destination

1. [Log in to your mailbox](#)³³.
2. Press *07 to access your outcalling settings.
3. Press 1.
4. Press 2 for number entry.
5. Press 1 and then enter the number which you want outcalling to call. Remember to include any external dialing prefix that you would normally dial to make the call.
 - A * in the number is treated as a pause (1.5 seconds) in the dialing.
 - To enter a # into the number, dial *#.
 - You can also use internal numbers as your outcalling destination. The calls will follow any internal forwarding and will honor do not disturb. However the outcalling attempt is ended if the call goes to voicemail.
6. Press # to finish number entry.

To Set Your Outcalling Timeout

The timeout control how long the outcalling call will ring the destination number before hanging up if not answered. The default is 15 seconds.

1. [Log in to your mailbox](#)³³.
2. Press *07 to access your outcalling settings.
3. Press 1.
7. Press 3 for timeout entry.
8. Enter a number between 5 and 59 and then press #.

Turning Outcalling On

1. [Log in to your mailbox](#)³³.
2. Press *07 to access your outcalling settings.
3. Press 9 to switch outcalling on.

Turning Outcalling Off

1. [Log in to your mailbox](#)³³.
2. Press *07 to access your outcalling settings.
3. Press 6 to switch outcalling off.

Chapter 5.

Your Call Log



5. Your Call Log

You can access your call log by pressing Feature 812. The call log you see is a call log stored on the telephone system. Your call log contains your 10 most recent answered calls, 10 most recent calls you made and 10 most recent missed calls.

- [Making a Call](#) ^[46]
- [Viewing Call Details](#) ^[45]
- [Deleting a Record](#) ^[46]
- [Deleting All Records](#) ^[46]
- [Add a Record to Your Contacts](#) ^[46]

5.1 Accessing the Call Log

1. Press Feature 812. The display will change to show your call log records.

- Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
- Use the  up and down  buttons to scroll through the records.





2. Pressing # or lifting the handset will make a call to the number stored with the currently displayed record. You can use the functions listed at the bottom of the display by pressing the soft key below the function name.

- [Call](#) ^[46]
To make a call to the currently displayed name or number, press #.
- [Detail](#) ^[45]
Display more details about the current call log record. You can then also [add the caller details to your personal directory](#) ^[46] if required.
- More
Switch between the different sets of available soft key functions.
- [Del](#) ^[46]
Deletes the current displayed record.
- [Del *](#) ^[46]
Delete all the call log records, not just the current types of records being shown.

3. To exit the call log, press the Feature button.



5.2 Viewing Call Details

You can view additional details about the currently shown call.

1. Press Feature 812. The display will change to show your call log records.
 - Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Use the  up and down  buttons to scroll through the records.
2. Press 0 (or press the Details soft key). The individual details of the currently selected call record are displayed.
3. The call details are displayed. Use the  and  keys to cycle through the values:
 - Time and Date - The time of the call.
 - Count - How many time a call of the same type, name and number has occurred. Only the details of the most recent call are kept in your call log. However the count will indicate if the caller has rung or has been rung several times.
 - Call Type - The type of call record. The options are *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Number - The number of the caller if available.
 - Name - The name of the caller if known.
 - Duration - The length of the call.
4. While you are in the details of a call record, the following functions are available:
 - Call the Number: Press # (or press the Call soft key).
 - Add to Your Personal Directory: Press 0 (or press the +Dir soft key).
 - Return to the Calls Display: Press * (or press the Back soft key).




5.3 Making a Call

You can use the call log to make calls to the number included in the currently selected call record.

1. Press Feature 812. The display will change to show your call log records.
 - Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Use the  up and down  buttons to scroll through the records.
1. Lift the handset or press the Call soft key to call the number displayed in the call record.



5.4 Deleting a Record

You can delete the currently displayed call record. If the record is a missed hunt group call, the record is also deleted from the call log of other users configured to see the same hunt group's missed calls.

1. Press Feature 812. The display will change to show your call log records.
 - Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Use the  up and down  buttons to scroll through the records.
2. When the required record is highlight, press  Hold (or press More and then press the Delete soft key).





5.5 Deleting All Records

You can delete all call records from your call log. This action deletes all call log record types (*Incoming*, *Missed* and *Outgoing*), not just the type you are currently viewing. This action deletes your personal call records and any hunt group call records.

1. Press Feature 812. The display will change to show your call log records.
 - Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Use the  up and down  buttons to scroll through the records.
2. Press the More soft key.
3. Press the Del* soft key to delete all your call log records.

5.6 Adding a Record to Your Contacts

You can add a name and number shown in your call log to your personal contacts.

1. Press Feature 812. The display will change to show your call log records.
 - Use the * key to select which call log records you are viewing. The options are *All*, *Mis (missed calls)*, *Ans (answered incoming calls)* and *Out (outgoing calls)*.
 - Use the  up and down  buttons to scroll through the records.
2. Press 0 (or press the Details soft key). The individual details of the currently selected call record are displayed.
3. Press 0 (or press the +Dir soft key).
 - If using one of the first two extensions on the system, you can add a contact to either your own personal speed dials (Personal...) or to the system speed dials (External...). Use the  and  key to select which.
4. Press # (or press the Selct soft key).

Chapter 6.


Phone Settings

6. Phone Settings


6.1 Naming Your Extension

A name can be assigned to your extension, up to 20 characters long. The name is displayed on the other extensions when you make or receive calls.

You can set and change your extension name using the following process.



1. At the phone press Feature *3.
1. Program Ext: is shown on the display.
2. Press the first intercom or call appearance button on the phone.
2. The current name is displayed. To remove the current name, press  Hold.
3. To enter a new name, dial the characters using the dial pad buttons. .
 - Enter a character by pressing the indicated button until that character is displayed. If you pause more than 1 second after press a button, the cursor will move onto the next space.

1	1!"\$%&'()+,.-./	2	2abcABC	3	3defDEF
4	4ghiGHI	5	5jkIJKL	6	6mnoMNO
7	7pqrsPQRS	8	8tuvTUV	9	9wxyzWXYZ
*	*:;<=>?@[\\]^_`	0	0 Space	#	#

- Do not use punctuation characters such as #, ?, /, -, _ and , in a name. Start the name with an alphabetic character.
- To finish, end the call or press the  Release button.



6.2 Contrast

You can change the contrast on the phone display.

1. Press Feature *7.
2. Use the number keys to select the required contrast. Alternatively, use the  and  buttons to change the contrast.
3. The function will automatically cancel after a 5 seconds.

6.3 Ringer Volume

You can change the ringer volume using the following process. You can also adjust the volume while a call is ringing your phone.

1. Press Feature *80. The phone will start a continuous ring.
2. Use the  soft and loud  volume buttons to change the volume to the level required.
3. The function will automatically cancel after a 5 seconds.



6.4 Button Programming

Your phone has a number of programmable buttons. You and your system administrator can assign functions to the programmable buttons on your phone. However, you cannot override any Intercom, Call Appearance or Line Appearance buttons already assigned by the system and your system maintainer.

Use the following process to set or change the function of a button.









- You cannot override any Intercom, Call Appearance or Line Appearance buttons assigned by the system and your system maintainer.
- Some functions are unique. If already assigned to a button, assigning the function to another button will automatically clear the setting from the existing button.
- If your phone is one of the first two extensions on the system, you have access to a range of advanced functions including programming your own or other users programmable buttons. Refer to the Phone Based Administration Guide for full details. In the process below, after dialing Feature *3, enter your own extension number.

1. At the phone press Feature *3. Program Ext: is displayed.

2. Press the button that you want to edit or enter the button number to select the button. The current setting of the button is displayed.
 - To remove the function press  Hold.
 - To change the function, dial the code for the required function (see below).
- To finish, end the call or press the  Release button.

Button Functions

The following are the functions that can be assigned to the programmable buttons. In addition to any Intercom, Call Appearance and Line Appearance button assigned by the system and your system administrator.

- [Absence Message](#):  *Feature 931*
This function allows you to set or clear an absent message for display on your phone. When set, the absent message is also displayed on other extensions when they call the user.
- [Account Code Entry](#):  *Feature 900*
This function allows you to enter an account code prior to making a call or during a call.
- Active Line Pickup: *Button 01, 68*
This function allows you to answer a call on a particular line. It can be used if the call is ringing, held or already answered by another extension.
- Auto Dial - Intercom: *Button 01, <Extension Number>*
This function allows you to make a call to another specified extension. The button lamp will also indicate when that other extension is in use.
- Auto Dial - Other: *Button 02, <number>*
This function allows you to make a call using a number stored with the button. The number can be an internal number, an external number, an account code or any other number. The button can then be used when a number of that type needs to be dialed.
- [Call Coverage](#):  *Feature 932*
This function allows you to switch call coverage on or off. When on, any calls to you that ring unanswered also start ringing at your call coverage extension.
- [Call Log](#):  *Feature 812*
This function allows you to view the phone system's call log of all caller IDs of calls received by the system. To use this you must be one of the three extensions configured for call ID logging by your system administrator.
- [Call Forwarding](#):  *Feature 4*
This function allows you to redirect all your calls to another number. If the system administrator has configured your for Remote Call Forwarding, you can forward calls externally by specifying a personal speed dial as the destination.
- [Call Pickup](#):  *Button 01, 6, <Extension Number>*
This function allows you to pickup a call alerting at a specified extension. Separate buttons can be created for each extension for which call pickup is required.
- Caller ID Inspect: *Feature 811*
This function allows you to see the caller ID of a call on another line without interrupting the current call to which you are connected.
- Caller Name Display: *Feature 933*
This function allows you to swap the display of caller ID name and number information on the phone.
- Calling Group: *Button 01, 71 to 74*
This function allows you to call the calling group represented by the button. Putting a * in front of the group number allows you to page the group instead.
- [Conference Drop](#):  *Feature 934*
This function allows you to select and drop a call from a conference.
- Contact Closure 1: *Feature 9*41*
This function you to operate the system's contact closure 1 connection which might, for example, be connected to a door control. To use this, you must be a member of the system's contact closure group.
- Contact Closure 2: *Feature 9*42*
This function you to operate the system's contact closure 2 connection. To use this, you must be a member of the system's contact closure group.
- [Do Not Disturb](#):  *Feature 85*
This function allows you to switch do not disturb on or off.
- Hot Dial: *Feature 935*
This function allows you to dial a stored number without first going off hook or pressing the SPEAKER button.
- Hunt Group: *Button 01, 771 to 776*
This function allows you to call the hunt group represented by the button. Put * in front of the group number in order to page the group instead of calling it.

-
- **Idle Line Pickup:** *Button 01, 8*
This function allows you to seize a line if that line is idle. You can use this to access a line for which you do not have a line appearance button available on your phone.
 - **Last Number Redial** ^[15]: *Feature 5*
This function allows you to redial the last external number dialed.
 - **Loudspeaker Paging** ^[15]: *Button 01, 70*
This function allows you to make a page call to the extension configured as being connected to the loudspeaker equipment.
 - **Message Alert Notification:** *Feature 938*
This function allows you to see the current state of other user's message waiting lamps. It is used in conjunction with other users for which you have Auto Dial - Intercom buttons.
 - **Night Service Button:** #503
A night service button is used to switch night service on/off.
 - **Pickup Group:** ^[16] *Button 01, 661 to 664*
This function allows you to answer a call being presented to any extension that is a member of the pickup group (1 to 4) configured for the button.
 - **Privacy** ^[24]: *Feature 83*
This function allows you to turn privacy on or off. When on, other extensions are not able to bridge into your calls.
 - **Recall:** *Feature 71*
This function allows you to send a recall or hook flash signal.
 - **Saved Number Redial:** *Feature 67*
This function allows you to save the number dialed during a call and to redial that number when idle. This can be used when the number dialed does not answer.
 - **Simultaneous Page** ^[15]: *Button 01, *70*
This function allows you to make a page call to both the loudspeaker extension and the extensions in first calling group, 71.
 - **Station Lock** ^[28]: *Feature 936*
This function allows you to lock and unlock your extension from being used to make calls. When selected, you are prompted to enter a four digit code after which the extension is locked. If the extension is already locked, use of this function prompts for reentry of the four digit code to unlock the extension.
 - **Station Unlock** ^[28]: *Feature 937*
This function can only be used by the first two extensions in the system. It allows the user to unlock any extension without needing to know the code that was used to lock that extension.
 - **VMS Cover** ^[38]: *Feature 984*
This function allows the you to switch use of voicemail coverage for your extension on or off.
 - **VMS Mailbox Transfer** ^[21]: *Feature 986*
This function allows you to transfer your current call to another extension's mailbox. Your current call is put on hold and you enter the target extension number to indicate the mailbox required.
 - **Wake Up Service:** *F#115*
A Wake Up Service button can be assigned for the first extension on the system. Using this button, the extension user can set wake up calls within the next 24-hours period for any other extension.
 - **Voicemail Collect:** *Button 01, 777*
Access your mailbox. If the button has an indicator, it is lit when you have any new voicemail messages.

Index

A

Absent Text Message 26
 Account Code 28
 Add
 Contact 46
 Alert Notification 48
 All
 Call Log 44, 45, 46
 Answer a Call 16
 Answered 44, 45, 46
 Answered Calls
 Log 44
 At home 26
 At lunch until 26
 Auto Dial 18
 Away from desk 26

B

B 12
 Back soon 26
 Back tomorrow 26
 Barred 12
 Be right back 26
 Bridge 24
 Button
 Message Alert Notification 48

C

Call
 Bridge 24
 Coverage 27
 Forward 26
 from Call Log 46
 From the Call Log 46
 History 44
 Ignore 16
 Join 24
 Log 44
 Park 20
 Pickup 16
 To VM 16
 CALL LOG 44, 45, 46
 Add to Directory 46
 Call from 46
 Delete 46
 Details 45
 Menu 44
 Redial 46
 Call Transfer - Supervised 21
 Call Transfer - Unsupervised 21
 Callback 14
 Caller
 Details 45
 Caller volume 20
 Cell Phone Connect 26
 Changing
 Mailbox Access Code 36
 Your Greeting Message 37
 Code
 Account 28
 Lock 28
 Conference
 Hold 22
 Start 22
 Contact

Add 46
 Contrast 48
 Count 45
 Coverage
 Call 27
 Voicemail 38

D

D 12
 Default Mailbox Access 33
 Delete
 Call Log 46
 Delete Message 34
 Details
 Call Log 45
 Directory
 Add 46
 Add From Call Log 46
 Display
 B 12
 Contrast 48
 D 12
 G 12
 N 12
 S 12
 T 12
 Diverting 12
 Do Not Disturb 12, 26, 29
 Don't disturb until 26

E

email alert 40
 email notification 40
 Extension
 Name 48

F

Fast Forward message 34
 Forward 26
 Forwarding 12, 39

G

G 12
 Greeting Message 37
 Group
 Call log 44
 Missed 44
 Group Member 12

H

Handset volume 20
 Handsfree 23
 Hear Help Prompts 33, 37
 History
 Call Log 44
 Hold
 Conference 22
 Hold a Call 20
 Hunt group
 Call log 44
 Missed 44

I

Ignore 16

J

Joining a Call 24

L

Letters
 Status 12

Lock 28

M

Mailbox Access 33

Mailbox Access Code 36

Make call

from Call Log 46

Meeting until 26

Menu

Call log 44

Message Alert Notification 48

Messages 33

Missed 44, 45, 46

Missed calls

Hunt group calls 44

Log 44

Mobile Twinning 26

More 44

N

N 12

Name 48

New

Contact 46

No Calls 12

Notification 48

O

On holiday until 26

On vacation 26

Out to lunch 26

Outgoing 44, 45, 46

Outgoing Calls

Log 44

P

Parking Calls 20

Personal Speed Dial 18

Phone Manager 33

Please call 26

R

Reason 45

Redial

From the Call Log 46

Reply 39

Rewind Message 34

Ring Again 14

Ring Back 14

Ring Time 45

Ringer volume 20

S

S 12

Save Message 34

Settings

Display Contrast 48

Skip Message 34

Speaker volume 20

Speakerphone 23

Speed Dial

Personal 18

System 18

Status Letters 12

Supervised Call Transfer 21

System Alarm 12

System Speed Dial 18

T

T 12

To VM 16

Transfer

To Voicemail 21

Transfer a Call 21

Twinned 12

U

Unlock 28

Unsupervised Call Transfer 21

V

Voicemail 33

Coverage 38

Transfer 21

Volume 20

W

Wake Up Service 48

With Cust. until 26

With visitors until. 26

Y

Your Mailbox 33

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

© 2011 Avaya Inc. All rights reserved.